

Lenco

USER'S MANUAL

Xemio-668

MP4 Media Player



For information and support: www.lenco.com

CAUTION:

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel.

PRECAUTIONS BEFORE USE**KEEP THESE INSTRUCTIONS IN MIND:**

1. Do not use this device near water.
2. Clean only with a slightly damp cloth.
3. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
4. Install in accordance with the supplied user manual.
5. * Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
6. * Unplug this device during lightning storms or when unused for a long period.
7. Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products or naked flame.
8. Avoid using the device near strong magnetic fields.
9. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
10. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
11. Do not use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
12. Do not use this device when condensation may occur.
13. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
14. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
15. * The socket outlet must be installed near the equipment and must be easily accessible.
16. * Do not overload ac outlets or extension cords. Overloading can cause fire or electric shock.
17. * Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
18. * Devices with class 2 construction do not require a earthed connection.
19. Keep away from rodents. Rodents enjoy biting on power cords.

20. * Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
21. Avoid placing the device on any surfaces that may be subject to vibrations or shocks.
22. To clean the device, use a soft dry cloth. Do not use solvents or petrol based fluids. To remove severe stains, you may use a damp cloth with dilute detergent.
23. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
24. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
25. If the unit has USB playback function, the usb memory stick should be plugged into the unit directly. Don't use an usb extension cable because it can cause interference resulting in failing of data.
26. The apparatus shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
27. * To completely disconnect the power input, the mains plug of the apparatus shall be disconnected from the mains, as the disconnect device is the mains plug of apparatus.
28. If the unit works with battery, Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
29. Attention should be drawn to the environmental aspects of battery disposal.
30. The apparatus can only be used in moderate extremely cold or climates warm environments should be avoided.
31. The rating label has been marked on the bottom or back panel of the apparatus.
32. This device is not intended for use by people (including children) with physical, sensory or mental disabilities, or a lack of experience and knowledge, unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
33. This product is intended for non professional use only and not for commercial or industrial use.
34. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
35. Never remove the casing of this apparatus.
36. Never place this apparatus on other electrical equipment.
37. Do not use or store this product in a place where it is subject to direct sunlight, heat, excessive dust or vibration.
38. Do not allow children access to plastic bags.
39. Only use attachments/accessories specified by the manufacturer.
40. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or the plug, when liquid has been spilled or objects have fallen into the apparatus, when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
41. *Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
42. Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.

INSTALLATION

- Unpack all parts and remove protective material.
- *Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.

*Those instruction are related only to products using power cable or AC power adaptor.

WARNING:	! When participating in the traffic listening to a personal music player can make the listener less aware of potential dangers such as approaching cars.
WARNING:	! Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.

1. Get to know the controls on Player

The diagram shows two views of a portable music player. The front view (left) shows a screen (1), a circular control pad (2) with buttons for play/pause (3), stop (4), previous (5), and next (6), and a power button (7). The back view (right) shows the Micro USB port (8), Micro SD Memory Card Slot (9), Earphone Output Jack (10), Volume Down button (11), and Volume Up button (12).

1	Screen
2	Control Pad
3	Play/Pause Button
4	Stop Button
5	Previous Button
6	Next Button
7	Power Button
8	Micro USB Port (PC Connection / Charge)
9	Micro SD Memory Card Slot
10	Earphone Output Jack (3.5mm Stereo)
11	Volume Down Button
12	Volume Up Button

2. Insert Micro SD Memory Card

This device is design without an internal memory; before you use it, please must insert a Micro SD memory card into player.

- ! Turn “Off” the play, then plug in the Micro SD memory card into player card slot;
- ! Now you can use the player for upload / download the desired media files with your PC computer.
- ! Or, Upload the desired media files direct to the Micro SD memory card with your computer before insert it into player.

! However, **“Card error / no card”** will display if Micro SD card is not in place or not in proper position when you want to enter into related menu.

Note: Make sure the player power is in **“Off”** status when insert / remove the Micro SD memory card from memory card slot. Otherwise, the player functional may result dead halt or the internal data / files will be lost or damaged.

3. About Player Battery

Player has an internal, non–user-replaceable battery. For best results, the first time you use player, let it charge for about 2 ~ 3 hours or until the battery status icon in the **“Connect”** screen shows that the battery is in full.



Battery is in full

Note: Player may continue use battery power after it's been turned off. For maintain the battery life and performance, if unit isn't used for a while, the battery need to be recharged, recharging the battery at least once per month.

a. Charging the Battery:

You can charge the player battery in two ways:

- Connect player to your computer. Or,
- Use the USB power charger. (not included)


b. Connection and Charging:

- Once you have connected player with computer / power charger, then you will see the **“Connect”** screen appear on screen,
- The level bars are running in battery status icon at the **“Connect”** screen. The battery is in charging.

“Connect” Screen



In Charging




Important: The battery does not charge when your computer is in sleep. The USB port on most keyboards does not provide enough power to charge the player. Connect player to a USB 2.0 port on your computer only to prevent charge problem.

4. Connecting and Disconnecting Player

You can connect the player with your computer to transfer those media files and recorded voice

memos when necessary, and to charge the battery.

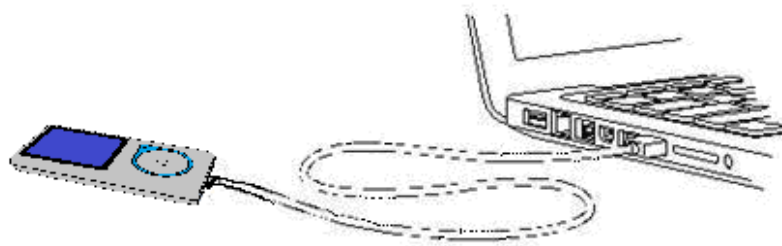

a. To Connecting Player

- To connect player to your computer, plug the connector of USB Cable into a USB port on your computer, and connect the other end to player, then the **“Connect”** screen appear for view.
- Now the player is ready for media files transfer with your computer and the battery is charging.
- You can transfer the media files by using the computer mouse use drag and place, or copy and paste, in between the player and your computer. Disconnect it when you're done.

b. To Disconnecting Player

It's important not to disconnect player while it's syncing or transferring files. Eject the player before disconnect it.

- To eject player, press and hold **M** button for about 2 seconds, the **“Connect”** screen will switch to **“Main Menu”** screen. And now is safe to disconnect the player with your computer. Unplug the USB cable from the player. Or,
- If you're using a Windows PC, you can also eject player in My Computer or by clicking the **“Safely Remove Hardware”** icon in the Windows system tray, select the correspondence name of USB Device and choose **“Stop”** > choose **“Confirm”** > choose **“Confirm”** follow by the pop up windows you're your computer.
- If you're using a Mac, you can also eject player by dragging the player icon on the desktop to the Trash.
- Disconnect the USB cable from the player and computer, simply remove it.
- If you accidentally disconnect player without ejecting it, reconnect it to your computer and sync again. However, some media file may loss.


5. Getting Start the Player



Turn ON / OFF the player and use of Main Menu.

- Press and hold the ►|| button for 3 seconds to turn ON, then you will see any one of the following shown Main Menu screen, **Music / Movie / Record / Voice / Photo / Setup / eBook / Game**, will appear on LCD after the Loading and Opening screen have displayed.

To OFF the player, press and hold the ►|| button for 3 seconds.

“Main Menu” screens

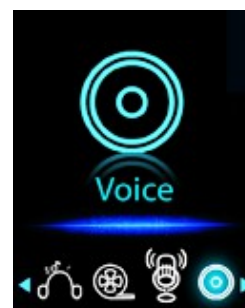

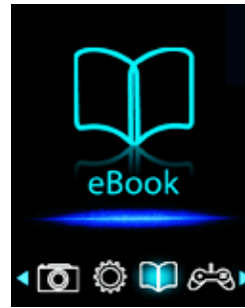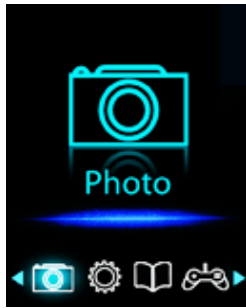

6. Use Setup Menu


You might need to set date & time or change some default setting as you desired in setup sub menu before you start to use the player.

- To go into setup menu, from main menu, choose “**Setup**” by use ◀◀ / ▶▶ button and then press ▶| button, a “Setting” menu appears to use.
- You can go back to previous menu by press the ⏪ button during in setup menu. Or, press and hold the ⏪ button to return to main menu.

Setup Menu



(Menu Page 1)

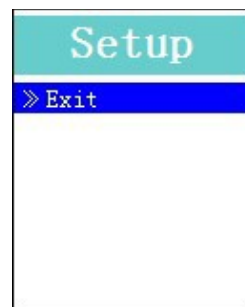

(Menu Page 2)

a. To Setup “System time” (Date & Time):

- Choose “**System time**” by using ◀◀ / ▶▶ button and then press ▶| button, a date & time setting screen appears to use.
- Press “+” button, the year is highlighted then adjusting to current year by pressing the ◀◀ / ▶▶ button. And repeating the adjusting methods by “+ / -” and ◀◀ / ▶▶ button again for finished those items; Month, Date, Hour, Minute and seconds setting adjustment.
- Finally, you need to press the ▶| button to confirm the adjustment and back to Setup menu, if not the date & time will not to memorize and you need to adjust them again.

Note: the set date & time will be losses if internal rechargeable battery is fully emptied in protection mode. Adjust the clock again if you want it to use.

b. To change “LCD set”

You can set the backlight to illuminate the screen for a certain amount of time as you desired or make the backlight to always ON when every time you turn ON the player.

- To change LCD backlight, choose “**LCD set**” > choose “**Dark mode**”, a level bar with number appear then chose “0 (always On) / 5 / 10 / 15 / 20 / 25 / 30 / 35 / 40 / 45 / 50 seconds” as you desired by using ▶| and ◀◀ / ▶▶ buttons. Choose “0” to prevent the LCD backlight from turning to off. (choosing this option decrease battery performance)

c. To Change “Language”

This player can use difference OSD languages.

- To set the language, choose “**Language**”, and then choose which language as you desired by using ►| and ◀◀ / ▶▶ buttons.

d. To Set “Power Off”

The Power Off setting can extend the time between battery charges by turning OFF the player when you are not using the controls or no operation. Also, Sleep function provided for more choice.

- To set power off time, choose “**Power off**”, then choose “**Off time**”, a levels bar with number menu appear, then choose “0 - 200 seconds” as you want by using ►| and ◀◀ / ▶▶ buttons.
- To set sleep time, choose “**Power off**”, then choose “**Sleep time**”, a levels bar with number menu appear, choose “0 / 10 / 20 / 30 / 40 / 50 / 60 / 70 / 80 / 90 / 100 / 110 / 120 minutes” as you want by using ►| and ◀◀ / ▶▶ buttons.

e. To View “Memory info”

You can view about the memory status of Micro SD card, such as the numbers of remaining memory space available and the percentage of memory have used.

- To view the status, choose “**Memory info**” by using ►| and ◀◀ / ▶▶ buttons. An information screen, remaining memory space available and percentage of memory used, appear for view.
- To return to setup menu or main menu press ↶ button or press and hold ↶ button.

f. To View “Firmware Version”

You might need to view the details about firmware information inside the Player.

- Choose “**Firmware version**” by using ►| and ◀◀ / ▶▶ buttons, an information screen appear for view.
- To return to setup menu or main menu, press ↶ button or press and hold ↶ button.

g. To “Exit”


- Select Exit to back to main menu. Or, press and hold the ↶ button to go back main menu.

7. Use Music Menu

You can use music player to playback with supported music file format of audio coding; WMA and MP3 are supported by the player. To open the music player in Main Menu:

- From main menu, choose “**Music**” by using ◀◀ / ▶▶ and ►| button, a “Music Now Playing” screen appears to use.

“Music Now Playing” Screen

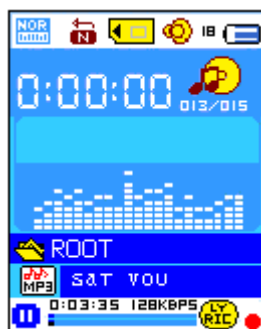

a. To Play / Pause Music

- In Music Now Playing screen, press ►| button to start the play.
- Press ►| button to pause the playing music.
- Press it again to resume.

b. Play Previous or Next Music

- Press ►► button to play next music.
- Press ◀◀ button to play previous music.

c. Use Fast-Forward or Fast-Backward

- Press and hold ►► button to use fast-forward
- Press and hold ◀◀ button to use fast-backward.

d. Adjust volume level

- In music playing, press + / - buttons to adjust volume levels to Up / Down.
- Wait for 6 – 8 seconds or press ►|| button to return to music now playing screen.

For hearing protection; A display warning pop-up on TFT screen, when every time you increase the volume level and reach to the default setting level which may exceed 85db. Press M button to accept the warning and press + Button to increase the volume level.

e. Use Lyric Display

This player supports “*.LRC” lyric files and lyrics can synchronous displayed while playing music if you music has lyric included. How to know whether the lyrics exist? If the current song has matching lyric files, the color dot beside the Lyric Message icon will be turned to green color  from red  in Music Now Playing screen.

- Make sure the music file name and “*.LRC” file name must be same and upload into player together.
- Playing the music with lyrics, and then press and hold M button to enter the lyric display mode and the lyrics is displaying and moving up accordingly with the playing music.
- Press M button to cancel the lyrics display and go back to Music Now Play screen if you want.

8. Use Music Submenu in Music Stop Mode

You might need to selecting folders for music play and delete music files. To do this:

- In Music Now Playing screen, press the ►|| button to stop the playing music if player is in playing. Then,
- Press the M button to pop-up the Music Submenu;

a. Card Folder

- In Music Submenu screen, choose “**Card folder**” a list menu appear, and then select folder and / or choose a music file by using ◀◀ / ►► and ►|| button.
- It will go back to music now playing screen once a music file is selected. Then press ►|| button to play.

b. Artists

- Choose “**Artists**” to enter folder(s) list menu grouping by Artist name, then choose who name of Artist folder > choose a song file in list where start the play.

c. Album

- Choose “**Album**” to enter folder(s) list menu grouping by Album name, then choose who name of Album folder > choose a song file in list where start the play.

d. Genre

- Choose “**Genre**” to enter folder(s) list menu grouping by Genres name, then choose who name of Genres folder > choose a song file in list where start the play.

e. Update playlist

- Choose “**Update playlist**” to update the playlist when you found it show incorrect; actually, it is

normal due to some media files could be manual deleted in Micro SD card by user in some case. However, update the playlist when necessary.

f. Delete file

- Choose **“Delete file”** a list menu appear, and then choose which music file that you want to delete by using **◀◀ / ▶▶** and **▶||** buttons.
- Once file is selected, press **▶||** button and choose **Yes** to confirm or **No** to cancel.

g. Delete All

- Choose **“Delete all”**, a dialog appear to choose, then selects **“Yes / No”** by using the **◀◀ / ▶▶** and **▶||** buttons.
- Choose **Yes** to confirm or **No** to cancel and press the **▶||** button to confirm.
- All music files will be deleted once YES is selected and confirmed, a “Deleting” screen appear for a while and deleting process is in progress, then “Empty disk!” message will shown on screen for few seconds.

h. Exit

- Select **Exit** to back to music now playing screen.

9. Use Music Submenu in Music Playing Mode

You might need to do some changes for music playing, such as repeat, EQ settings for music files... etc. To change setting:

a. To Set Repeat

- In music playing mode, press **M** button, a Music Submenu appear ;
- Choose **“Repeat”**, then choose **“Normal / Repeat one / Repeat All / Repeat folder / Random All / Random Folder”** as you desired by using **◀◀ / ▶▶** and **▶||** buttons.

b. To Change Equalizer

- Choose **“Equalizer”**, then choose **“Natural / Rock / Pop / Classic / Soft / Jazz / DBB”** as you desired.

c. Exit

- Select **Exit** to back to music now playing screen.

10. Use Movie Menu

a. To Play Movie

- From Main Menu, choose **“Movie”** by using **◀◀ / ▶▶** and **▶||** button, a “Movie Now Playing” screen appears to use.
- In “Movie Now Playing” screen, press **▶||** key to start the play.
- Press **▶||** button to pause and to back to Movie Now Playing screen. Press it again, the video will play continue.

b. To Play Previous or Next Video

- Press **▶▶** button to play next movie file.
- Press **◀◀** button to play previous movie file.

c. Use Fast-Forward or Fast-Backward

- Press and hold **▶▶** button to play fast-forward.
- Press and hold **◀◀** button to play fast-backward.

d. Adjust Volume Level

- In movie playing, press **+ / -** buttons to adjust volume levels to Up / Down.

For hearing protection; warning will pop up at the display, when every time you increase the volume level and reach to the default setting level which may exceed 85dB. Press **M** button to accept the warning and press **+** button to increase the volume level.

11. Use Movie Submenu

You might need to selecting folders, delete movie files and set repeat for movie play. You can make change during in the playing mode at Movie Now playing screen, To do this:

- In “Movie Now Playing” screen, press **M** button to enter to movie submenu.

a. Card Folder

- In movie submenu screen, choose “**Card Folder**”, a file list menu appear, and then select folder and / or choose a desired movie file to play by using **◀◀ / ▶▶** and **▶||** button.
- It will go back to movie now playing screen once a movie file is selected. Then press **▶||** button to play.

b. Delete File

- In movie submenu screen, choose “**Delete file**” a file list menu appear, and then choose which movie file that you want to delete by using **◀◀ / ▶▶** buttons.
- Once file is selected, press **▶||** button and choose “Yes” to confirm or “No” to cancel.

c. Delete All

- In movie submenu screen, choose “**Delete all**” then selects “Yes / No” by using **◀◀ / ▶▶** button.
- One “YES” or “NO” appear then press **▶||** button to confirm.
- All movie files will be deleted once YES is selected and confirmed, a “Deleting” screen appear for a while and deleting process is in progress, then “Empty disk!” message will shown on screen for few seconds.

d. Repeat

- In movie submenu, choose “**Repeat**”, then choose “**Normal / Repeat one / Repeat all / Repeat folder / Random all / Random folder**” as you desired by using **◀◀ / ▶▶** and **▶||** buttons.


e. Exit

- Select Exit to back to music now playing screen.

12. Convert Video files into AMV

This tool can be used to transform those video files into AMV files on the computer before upload them to your player.


- To install this video convert tool to your computer, open a folder named “**UTILITIES > Video Conversion Software**” which stored in a provided Micro SD card. (Download it onto your computer for copy and installation)
- Select “**Setup**” to start the installation.
- After installation is done, go to “**Programs > Utilities > Video Conversion Software > Video converter**” in All Programs.

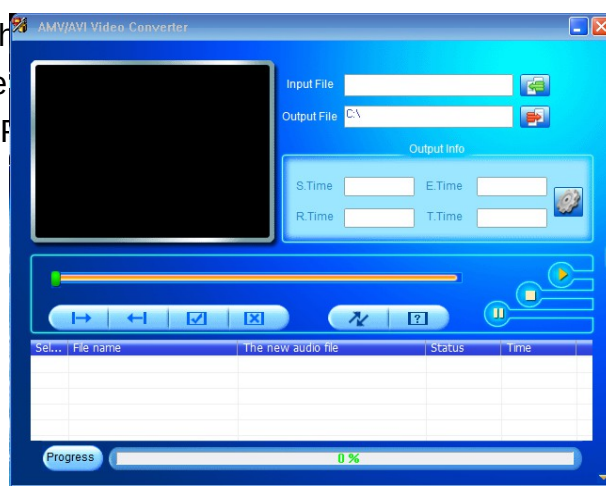


atically install to your computer.
X” > click program “AMV&AVI
ram interface as shown below:

Noted: This program is used to convert video files into AMV format, currently only AMV format is supported by this player.


- Then click  to choose the folder where to save the AMV files, and then click  to select the folder where the original files are. The original file will show in the file window once selected.

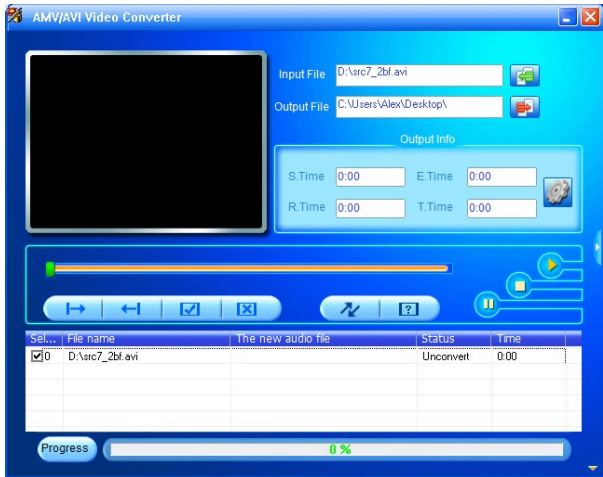


- Move the mouse arrow and left click mouse on the unconverted source files to select with highlight in the file window, then the  icon will be highlighted into  icon. Now click this  icon and a dialog box will be shown.

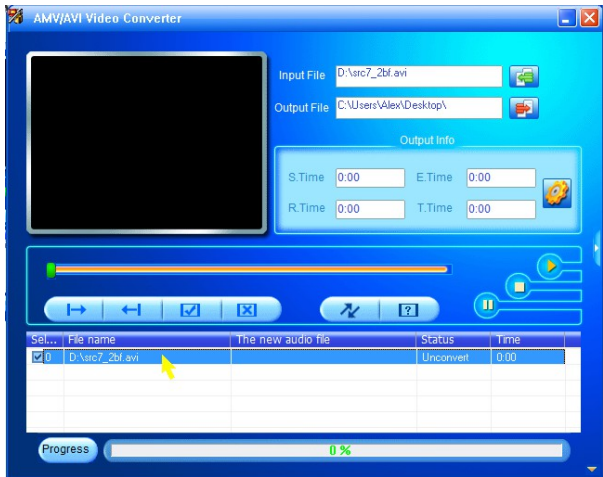

- Now click this  icon and a dialog box will be shown.

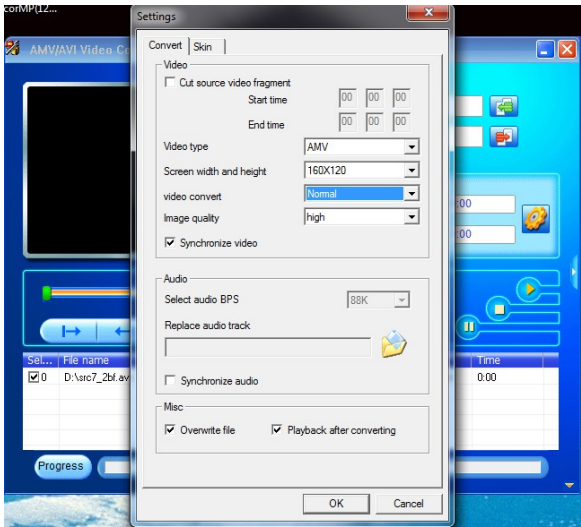

- Make sure Video type is “**AMV**”, Screen width and height is “**160x120**” selected. Video convert and Image quality should be “**Normal**” and “**High**” as defaulted. Click “**OK**” to confirm the setting.
- Now click  to start converting.

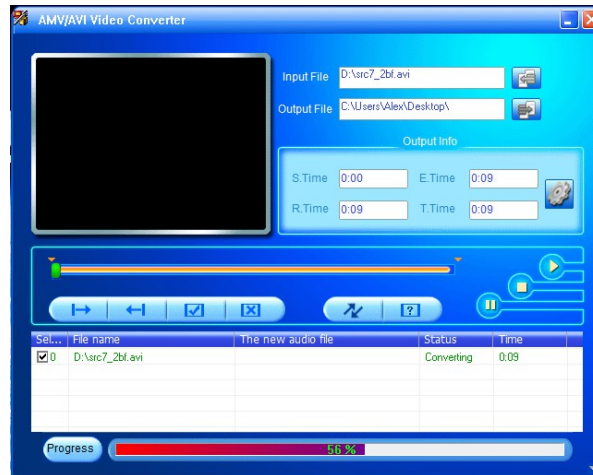

- After conversion, the AMV files will play automatically for preview.
- And now, the converted AMV file is ready to transfer, you can simply copy and place those converted AMV files to the media player.

Note: Only pixels in **160x120** or **320x240** can be supported by this player.

13. Use Record Menu

You can use the player as a Voice Recorder and recording voice memos using the built-in microphone.

a. To Start Recording Voice Memo

- From main menu, choose “**Record**” by using ◀◀ / ▶▶ and ▶|| buttons, a “Now Recording” screen appear to use.

“Now Recording” Screen



b. To Start / Pause Recording

- Press ▶|| button to start the recording and the recording time is running.
- Press ▶|| button to pause the recording and recording time will stop and flashing. Press it again the recording and time will run continue.

c. To Save and Stop Recording File

- Press ↶ or press and hold ▶|| button, the recorded file will save into Micro SD memory card and ready for next recording.
- Press and hold ↶ button, the recorded file will save into Micro SD memory card and to exit.

14. Use Record Submenu (in Stop Mode)

You might need to change the folder locations which want to store the record file and / or change record quality to better compression values.

- In Now Recording screen at stop mode, press **M** button, a “Record Submenu” appear to use.

a. Card folder

- In record submenu, choose “**Card folder**” and then choose the folder name which you want to save the record file by using **◀◀ / ▶▶** and **▶||** buttons.
- Once folder name selected, press and hold the **M** button, then the folder location is changed and go back to Now Recording screen.
- And now you can see the folder name is changed at the Record Folder icon in “Now Recording” screen.

b. Record Type

- In record submenu, choose “REC type”, then choose “32K BPS / 64K BPS / 128K BPS / 256K BPS” values as you desired by using **◀◀ / ▶▶** and **▶||** buttons.

c. Exit

- Select Exit to back to music now recording screen.

15. Use Voice Menu

For playback and manage the recorded voice memos file.

- From main menu, choose “**Voice**” menu by using **◀◀ / ▶▶** and **▶||** buttons, a “Voice Now Playing” screen appear to use.

“Voice Now Playing” Screen



a. To Play and Pause Recorded Voice Memos

- In Voice Now Playing screen, press **▶||** button to start to play the recorded file.
- Press **▶||** button to pause the playing file.

b. To Play Previous or Next File

- Press **▶▶** button to play next file.
- Press **◀◀** button to play previous file.

c. To Fast-Forward or Fast-Backward

Press and hold **▶▶** buttons to use fast-forward

Press and hold **◀◀** button to use fast-backward.

d. Adjust volume level

- In music playing , press **+ / -** button, a change volume control screen appears, then press **+ / -** buttons to adjust volume levels to up / down.
- Wait for 6 – 8 seconds or press **▶||** button to return to music now playing screen.

For hearing protection; warning will pop up at the display, when every time you increase the volume level and reach to the default setting level which may exceed 85dB. Press **M** button to accept the warning and press **+** button to increase the volume level.

16. Use Voice Submenu in Stop Mode

You might need to change some setting as you desired, in Voice Now Playing screen, press **▶||** button to pause / stop the playing file, if in playing mode, then press **M** button to call up the voice submenu.

a. Card Folder

- In Voice submenu screen, choose “**Card folder**” a list menu appear, and then select folder and / or choose a voice file by using **◀◀ / ▶▶** and **▶||** button.
- It will go back to voice now playing screen once a record file is selected. Then press **▶||** button to play.

b. Delete File

- In voice submenu screen, choose “**Delete file**” a list menu appear, and then choose which voice file that you want to delete by using **◀◀ / ▶▶** and **▶||** buttons.
- Once file is selected, press **▶||** button and choose **Yes** to confirm or **No** to cancel.

c. Delete All

- In voice submenu screen, choose “**Delete all**” then selects “Yes / No” by using **◀◀ / ▶▶** button.
- One “YES” or “NO” appear then press **▶||** button to confirm.
- All Recorded files will be deleted once YES is selected and confirmed, a “Deleting” screen appear for a while and deleting process is in progress, then “Empty disk!” message will shown on screen for few seconds.

d. Exit

- Select Exit to back to voice now playing screen.

17. Use Voice Submenu in Playing Mode

You might need to do some changes for voice playing, such as repeat for recorded files... etc. To change setting:

a. Repeat

- In voice playing mode, press **M** button, a Voice Submenu appear, then choose “**Repeat**”, then choose “Normal / Repeat one / Repeat all / Repeat folder / Random all / Random folder” as you desired by using **◀◀ / ▶▶** and **▶||** buttons.

b. Exit

- Select Exit to back to voice now playing screen.

Note: Press and hold the **↶** button will go back to Main Menu directly.

18. Use Photo Browse

You can use the player as a picture / photo viewer:

- To browse picture / photo file, from main menu choose “**Photo**” by using **◀◀ / ▶▶** and **↶** button, a list menu appear to use.
- Choose a file by using **◀◀ / ▶▶** button, and then press **▶||** button to play.
- Press **▶||** button to stop and to go back to list menu for other files selection.
- To change previous / next photo, press **◀◀ / ▶▶** button.

- Press and hold ↩ button to back to main menu.

19. Use Photo Submenu in List Screen

You might need to change some setting for photo browse. To change setting:

a. Card Folder

- In list menu, press **M** button to call up the photo submenu.
- In photo submenu, choose “**Card folder**” a list menu appear, and then choose folder and file to browse by using ◀◀ / ▶▶ and **M** button.
- Once photo file is selected, press ▶▶ button to play.

b. Playback Set

- In photo submenu, choose “**Playback set**” and then choose “Manual play”. However, you need to use ◀◀ / ▶▶ button to browse next / previous photo in photo playing mode when Manual Play is selected.
- Choose “Auto play”, a setting menu appear, then choose “2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 second(s)” as you desired by using ◀◀ / ▶▶ and ▶▶ buttons. The slide show function is activated as your selected time gap to playing the photo files one by one automatically.

c. Delete file

- In photo submenu, choose “**Delete file**” a list menu appear, and then choose which photo file that you want to delete by using ◀◀ / ▶▶ button.
- Once file is selected, press ▶▶ button and choose Yes to confirm or No to cancel.

d. Delete All

- In photo submenu, choose “**Delete all**” then selects “Yes / No” by using ◀◀ / ▶▶ button.
- One “YES” or “NO” appear then press ▶▶ button to confirm.
- All photo files will be deleted once YES is selected and confirmed, a “Deleting” screen appear for a while and deleting process is in progress, then “Empty disk!” message will shown on screen for few seconds.

e. Exit

- Select **Exit** for back to photo browse list menu screen.

20. Use eBook Menu

You can use the player as a text reader with supported file format (.TXT).

a. To open eBook

- From main menu, choose “**eBook**” by using ◀◀ / ▶▶ and ▶▶ buttons. A list menu appears to use.
- Choose a file which you want to read by using ◀◀ / ▶▶ button, and then press ▶▶ button to play.
- Press ▶▶ button to change next page,
- Press ◀◀ button to go back to previous page,
- Back to list menu screen, press ↩ button.
- Go back to main menu, press and hold ↩ button.

21. Us eBook Submenu in list menu screen

You might need to change some setting for eBook reading. To change setting:

a. Card Folder

- In eBook list menu screen, press **M** button to call up the eBook Submenu.

- In eBook Submenu, choose “**Card folder**” a list menu appear, and then choose folder and file by using ◀◀ / ▶▶ and ▶|| button.
- Once file is selected, press ▶|| button again to read.

b. **Playback Set**

- In eBook Submenu, choose “**Playback set**” and then choose “**Manual play**”. You need to use ◀◀ / ▶▶ button to change next / previous page for reading when Manual Play is selected. Or,
- Choose “**Auto play**”, a setting menu appears, then choose “1 / 2 / 3 / 4 / 5 / 5 / 6 / 7 / 8 / 9 / 10 second(s)” as you desired by using ◀◀ / ▶▶ and ▶|| buttons. The Page Flip function is activated as your selected time gap to playing.

c. **Delete file**

- In eBook Submenu, choose “**Delete file**” a list menu appear, and then choose which eBook file that you want to delete by using ◀◀ / ▶▶ button.
- Once file is selected, press ▶|| button and choose **Yes** to confirm or **No** to cancel.

d. **Delete All**

- In eBook Submenu, choose “**Delete all**” then selects “Yes / No” by using ◀◀ / ▶▶ button.
- One “YES” or “NO” appear then press ▶|| button to confirm.
- All eBook files will be deleted once YES is selected and confirmed, a “Deleing” screen appear for a while and deleting process is in progress, then “Empty disk!” message will shown on screen for few seconds.

e. **Exit**

- Select Exit for back to eBook list menu screen.

22. **Us eBook Submenu in Playing Mode**

You might need to add, select and delete some bookmark when you reading, to do this:

a. **Bookmark Select**

- In eBook playing mode, choose “**Bookmark select**” by using ◀◀ / ▶▶ and ▶|| button.
- Choose a stored bookmark which you want to call and then press **M** button to play.

b. **Bookmark Delete**

- In eBook playing mode, choose “**Bookmark delete**” a list menu appears, and then choose which saved bookmark you want to delete by using ◀◀ / ▶▶ button.
- Once bookmark is selected, press ▶|| button to confirm. The bookmark is deleted and goes back to current reading play.

c. **Bookmark Add**

- In eBook playing mode, select the reading page you want to bookmark, press **M** button to call up eBook submenu.
- Choose “**Bookmark Add**” by using ◀◀ / ▶▶ button and then press ▶|| button, the pages is saved into bookmark and go back to current reading page automatically.

d. **Exit**

- Select Exit for back to eBook list menu screen.

23. **Use Game Menu**

There have a game named “Snake”. Control the snake move up, down, left and right to eat the food (dot) which will exist somewhere on TFT screen. The snake’s body will get longer at every eats for food, but

don't let the snake hit the walls and hit the snake body.

- To play game, from Main menu, choose "Game" menu, then choose a game to play.
- Control KEY instruction;
- Press: ◀◀ = left, ▶▶ = right, M = Up, ↺ = Down, ▶|| = Pause.
- Press and hold M button to exit the game.

24. Reset Device

In some circumstances, the device may encounter dead halt during use. This device has design with built-in a mini tact switch which located at the behind of the earphone jack, so it can provide reset function to restart the device by pass through the earphone jack hole.

To Reset:

- Use a 1mm stick or similar object (like tooth stick), and carefully insert the stick, use dull side, into the earphone jack hole until you feel to hit the end. Actually that is the tact switch button surface.
- Then add a bit of force and you will get a click sound and feeling return from switch. The device is reset and restart in seconds.

Important: Do not reset the device if it is proper working.

25. Trouble Shooting

Unit cannot turn ON	* Check whether Power is slide to ON. * Check battery is it charged with enough energy.
No sound is heard from headphone.	* Check whether Volume is set "0" and connect the headphone plugs firmly. * Check whether the headphone plug is dirty. * Corrupted MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted.
Characters in LCD are corrupted	* Check whether the right language has been selected.
Download of music files fails.	* Check whether USB cable is damaged and is connected properly. * Check whether driver is installed correctly. * Check whether the Micro SD memory card is in full.

26. Specification

Dimension	85mm (H) x 41.5 mm (W) x 9.0mm (D)
Weight	25.5g
LCD	1.8 inches, Resolution (RGB) 128 x 160
PC connection	USB 2.0 (High Speed)
Earphone Impedance	32 Ohm
Memory Card Slot	Micro SD Card (support up to 64GB)
Battery	Lithium 3.7V, 170mAh Max. Play Time: 8 - 10 Hours (MP3 music with power saving mode)
Power Source	DC Input: DC 5V 500mA

Audio	Earphone Output	2mW x 2 at 32 Ohm
	Frequency Responses	20Hz to 20000Hz
	SNR	> 70dB
Music Format	MP3 / WMA	32Kbps – 320kbps
Movie Format	AMV	160x120 / 320x240 (max.)
Recorder Coding	WAV	32 / 64 / 128 / 256kbps
Picture Format	JPEG / BMP	
eBook Format	TXT	
Operating Temperature	0 to 40°C	
Operating System	Window 2000/XP/Vista/Win7/8/10, Mac 9.2 or Higher	

27. Guarantee

Lenco offers service and warranty in accordance with the European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products that need repairs to Lenco directly.


Important note: If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

28. Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

29. Disposal of the Old Device

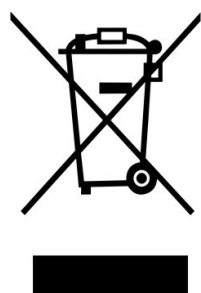

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

30. CE Marking



Products with the CE marking comply with the EMC Directive (2014/30/EU) and the Low Voltage Directive (2014/35/EU) issued by the Commission of the European Community.

Hereby, Lenco Benelux BV, Thermiekstraat 1a, 6361 HB Nuth, The Netherlands, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The declaration of conformity may be consulted via techdoc@lenco.com

31. Service

For more information and helpdesk support, please visit www.lenco.com

Lenco Benelux BV, Thermiekstraat 1a, 6361 HB, The Netherlands.